


FRONT VIEW

Drain

4

SIDE VIEW

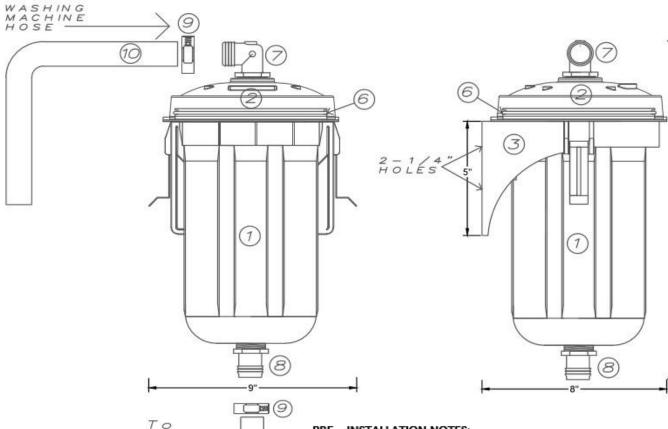

ME	EE.	rs	OR	E>	< C	EED	s	IPO	C 1	00	3.6
			INCH								0
ŝ	FE	AT	PAS	s	WH	TER	P	10	FIL	TE	R

NUMBER	DESCRIPTION				
1	FILTROL CANISTER	1			
2	CANISTER LID	1			
3	MOUNTING BRACKET WITH 2 CLIPS	1			
4	1" RUBBER HOSE/ 5 FEET LENGTH	1			
5	FILTER BAG	1			
6	O-RING (ASSEMBELD ON CANISTER)	1			
7	ELBOW INLET BARBED FITTING - SIZE 1" THREADED X ¾" BARBED	1			
7	ELBOW INLET BARBED FITTING- SIZE 1" THREADED X 1" BARBED	1			
8	8 STRAIGHT OUTLET BARB FITTING – SIZE ¾" THREADED X 1" BARBED				
9	HOSE CLAMPS	2			
10	SMALL TUBE OF LUBRICANT	1			



 IDENTIFY WASHING MACHINE DISCHARGE HOSE DIAMETER. THE FILTROL COMES STARDARD WITH A ¼" AND 1" BARBED FITTING. 1 ¼" FITTINGS ARE ALSO AVAILABLE AT AN ADDITIONAL CHARGE.

15"

2. VERIFY THE MOUNTING AREA IS LARGE ENOUGH TO MOUNT THE FILTER TO ALLOW EASE OF MAINTENANCE.

3. THE FILTROL SHOULD NOT BE INSTALLED HIGHER THAN 72" FROM FLOOR LEVEL.

 THE DISCHARGE HOSE FROM THE FILTROL SHOULD DRAIN STRAIGHT DOWN IF POSSIBLE AND SHOULD NOT EXCEED A 45 DEGREE ANGLE.

5. THE FILTROL MOUNTING BRACKET SHOULD BE SECURED TO A STUD, CONCRETE WALL, OR OTHER STURDY METHOD.

MAINTENANCE NOTES:

1. THE FILTROL GENERALLY REQUIRES CLEANING EVERY 8-10 LOADS. REMOVE THE FILTER BAG FROM THE UNIT, INSIDE OUT OVER A TRASH CAN, REMOVE THE LINT, AND PLACE BACK INTO THE FILTER CANISTER.

2. DO NOT USE LIQUID FABRIC SOFTNER WITH THE FILTROL UNIT.

3. INCASE OF PLUGGING, THE FILTER BAG FEATURES BYPASS HOLES SO EFFLUENT DOES NOT BACK UP AND DAMAGE THE WASHING MACHINE.

PAGE TITLE FILTROL SPEC SHEET

DRAWN BY: BRK REV:3

DATE: 2/21/2018

FILTROL.NET 6074 KEYSTONE RD MILACA MN 56353 (320)983.2447 FAX (320) 983.2151